


ROME BINDING TECHNOLOGIES DIVISION

CUSTOMIZING YOUR UNDERWRAP™ BINDINGS


1 Ankle Strap Position

Rome bindings provide three ankle strap mounting positions on both sides of the heel hoop. Mount in the forward position for the softest flex level, mount in the middle position for a medium level of support, or mount in the rear position for the maximum amount of support.


FORWARD - SOFTEST FLEX

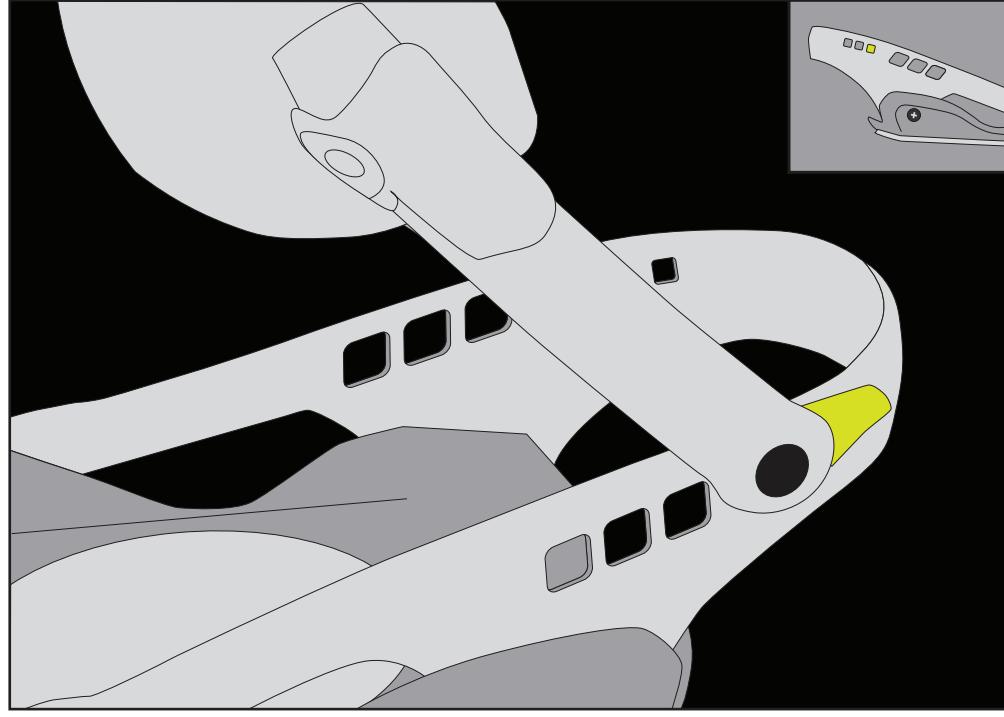

MIDDLE - MEDIUM SUPPORT

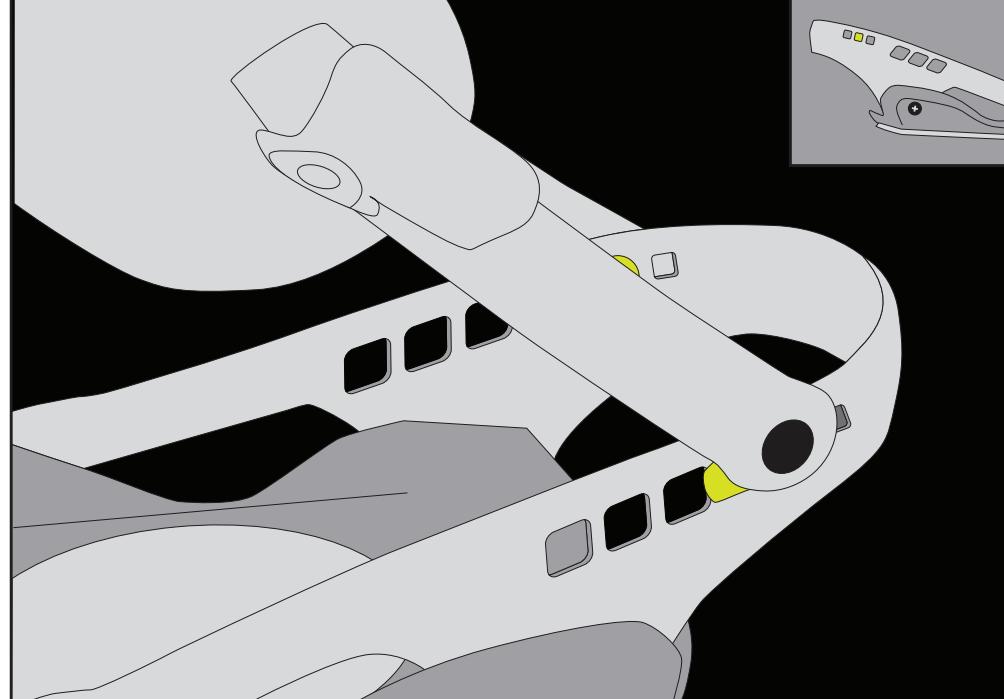


REAR - MAXIMUM SUPPORT

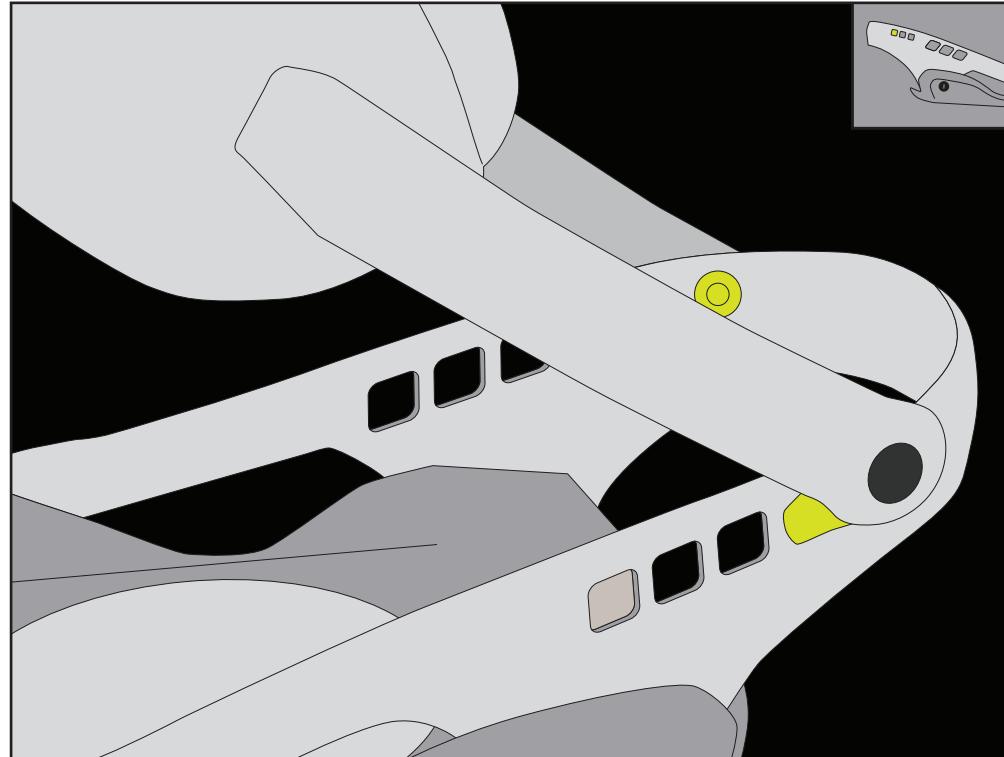

2 Highback Rotation

To get your highback inline with your heelside edge, Rome bindings offer four positions of rotation: 0°, 4°, 8°, and 12°. Rotation adjustments are made by using the two mounting holes in each wing of the highback, and the three highback mounting holes on the heel hoop. To rotate your highback, remove the highback mounting screws and re-position using the combinations of the mounting holes in the highbacks and the mounting holes in the heel hoop.


RIGHT FOOT EXAMPLE

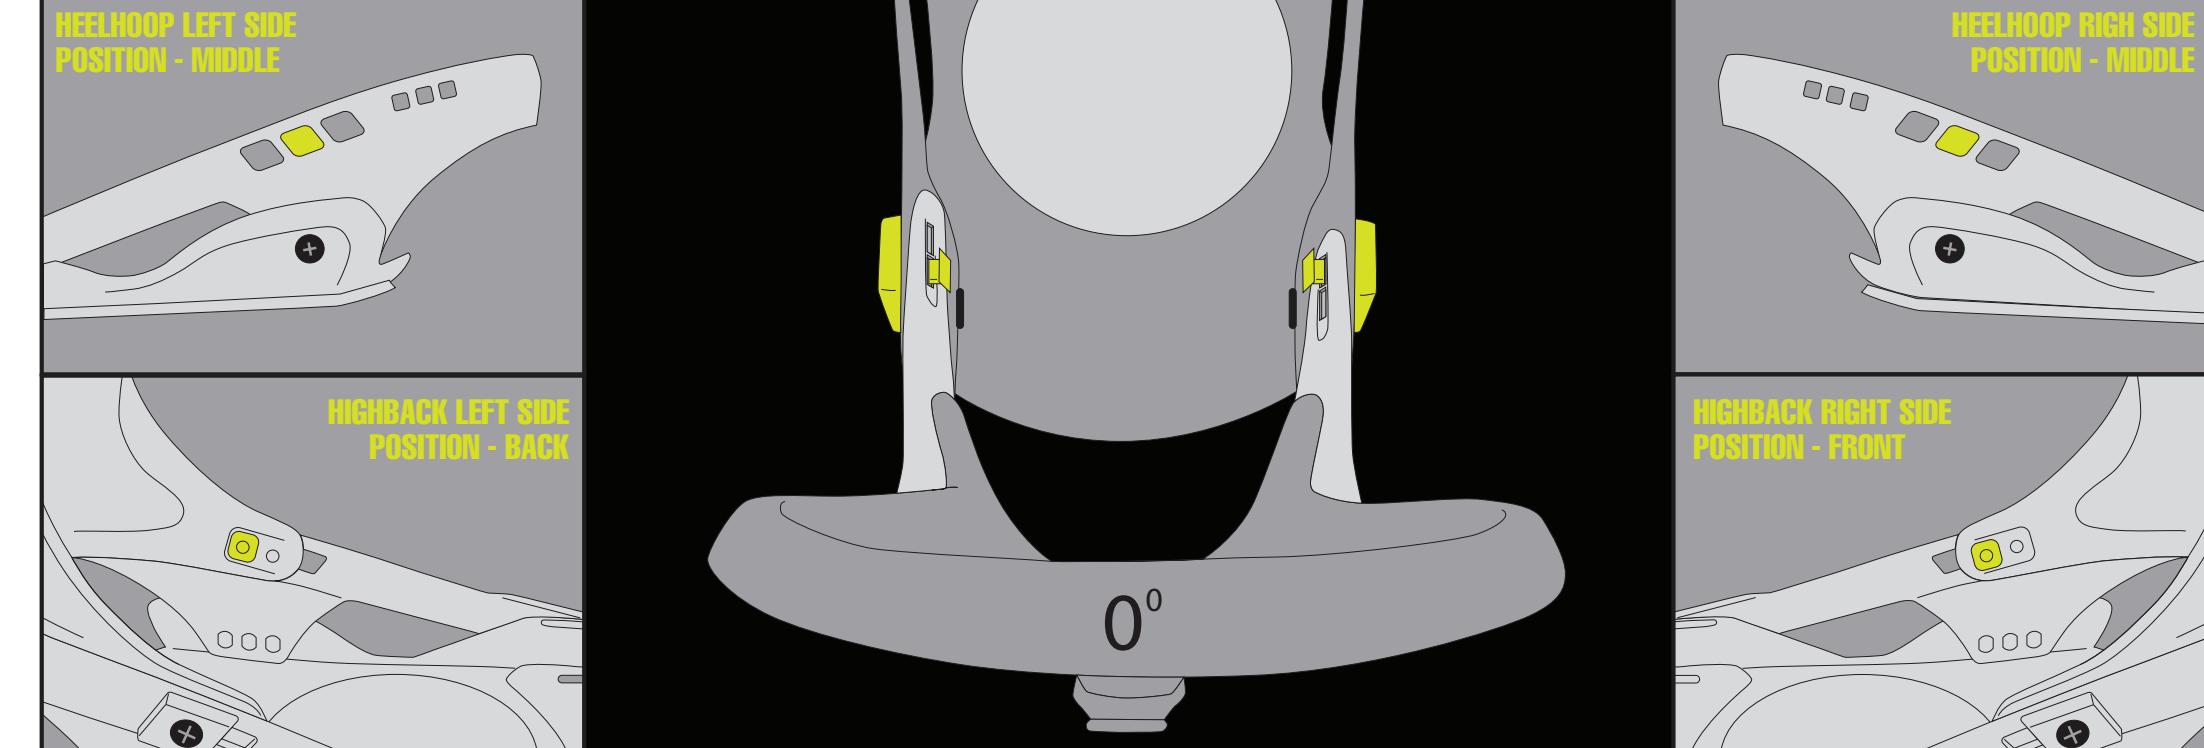

HEELHOOP LEFT SIDE POSITION - MIDDLE

HIGHBACK LEFT SIDE POSITION - BACK

0°

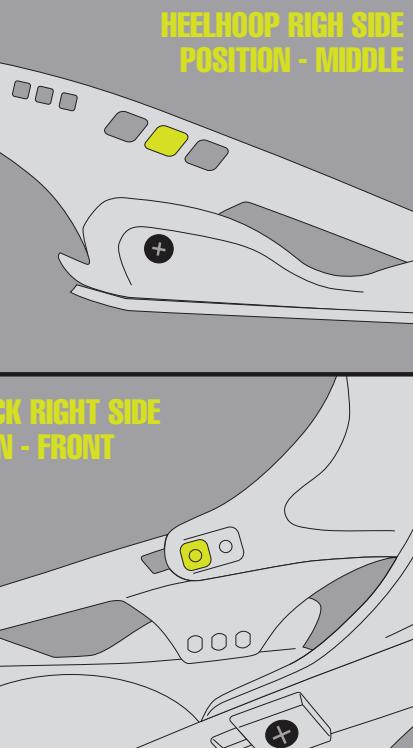


HIGHBACK RIGHT SIDE POSITION - FRONT

HEELHOOP HIGH SIDE POSITION - MIDDLE

HIGHBACK LEFT SIDE POSITION - FRONT

4°

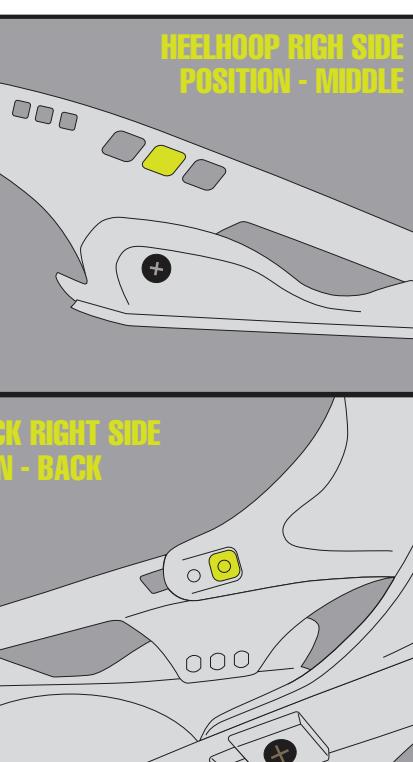


HIGHBACK RIGHT SIDE POSITION - BACK

HEELHOOP LEFT SIDE POSITION - BACK

HIGHBACK LEFT SIDE POSITION - BACK

8°

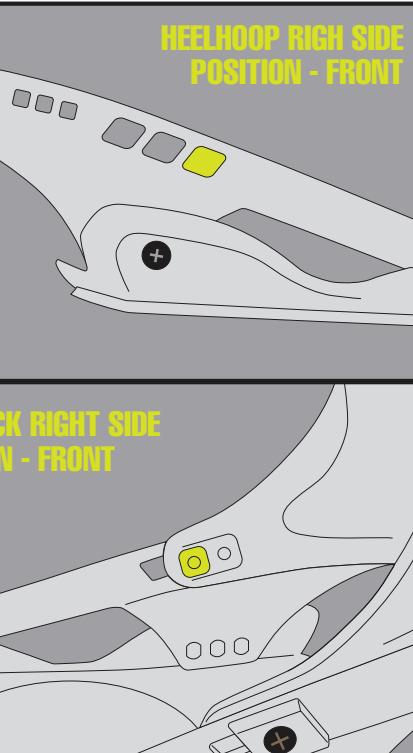


HIGHBACK RIGHT SIDE POSITION - FRONT

HEELHOOP LEFT SIDE POSITION - BACK

HIGHBACK LEFT SIDE POSITION - FRONT

12°

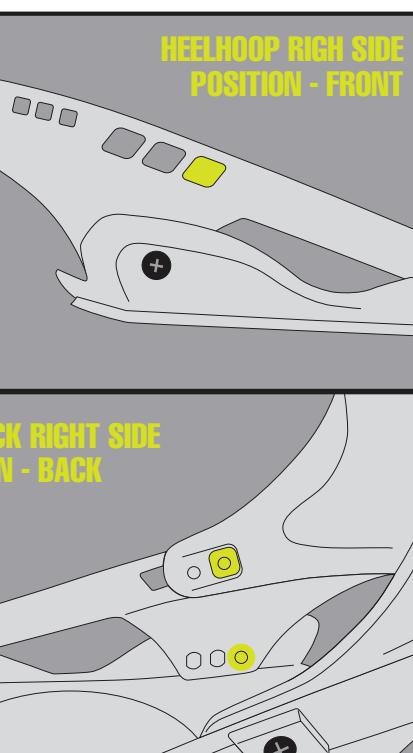

HEELHOOP HIGH SIDE POSITION - FRONT


HIGHBACK RIGHT SIDE POSITION - BACK

*FOR LEFT FOOT HIGHBACK ROTATION,
SIMPLY MIRROR THESE INSTRUCTIONS

3 Ankle Strap Flex Adjustment (only on Targa)




On the Targa's PF Adjust Ankle Strap, if you want customize your instep support and flex, remove or switch out the middle EVA layer of the strap—the C_Flex Insert. Three levels of flex:

- High-flex with the C_Flex Insert removed.
- Mid-flex with the softer C_Flex Insert.
- Low-Flex/High support with the stiffer C_Flex Insert.

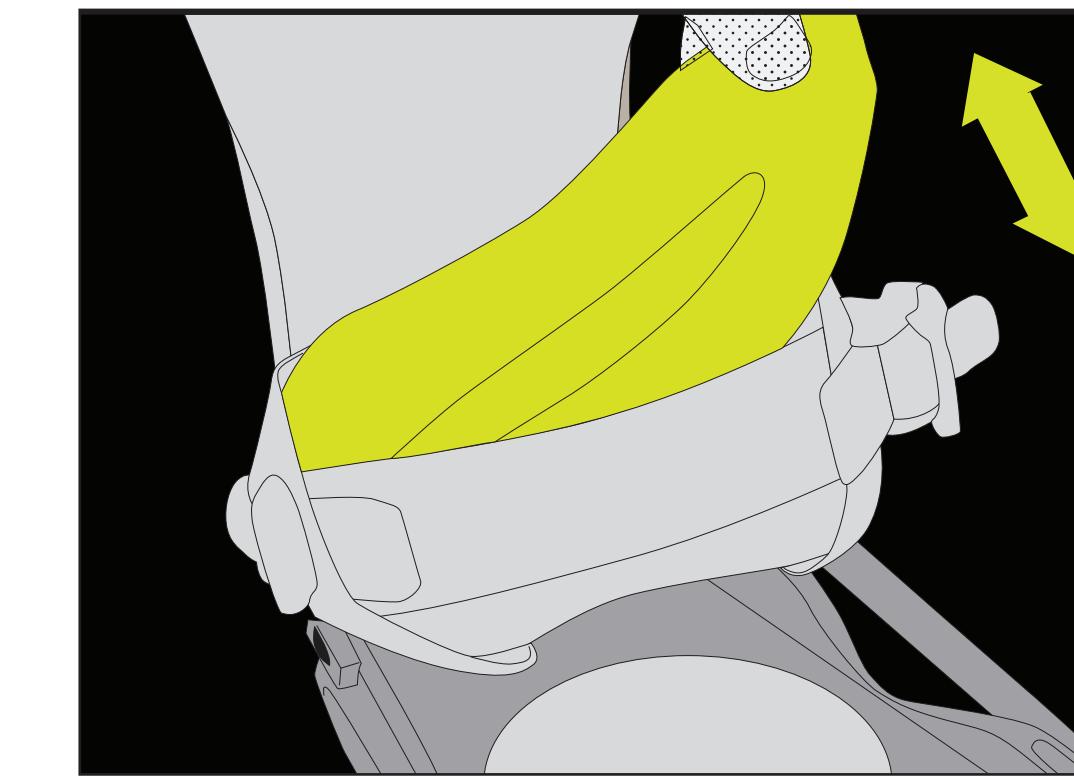

4 QuickStrap Ankle and Toe Strap Length Adjustment


Rome's QuickStrap.2 technology gives riders tool-free power to precisely place their ankle strap and toe strap with smaller increments of adjustment. To adjust, simply flip open the quick lever. Position strap so that it sits centered on your boot and close the quick lever. Bang.

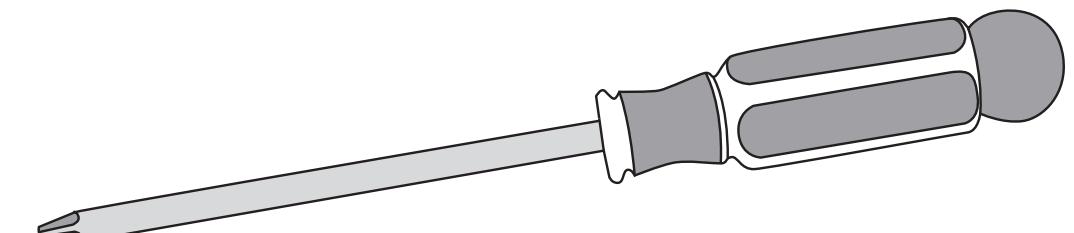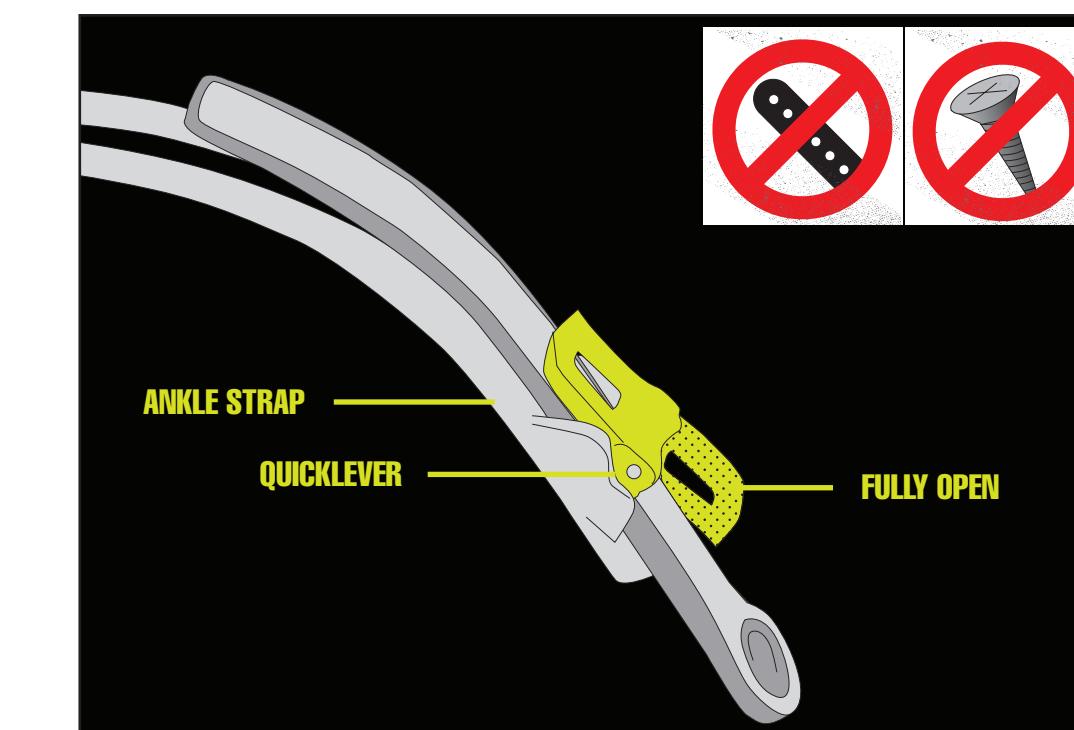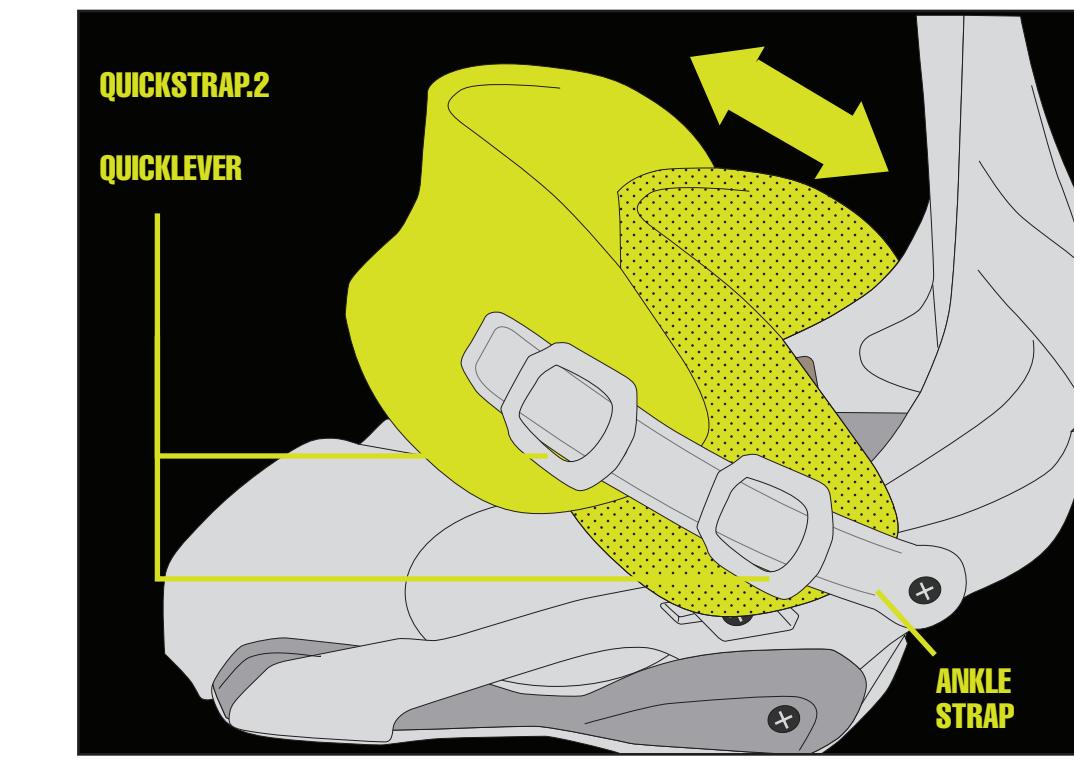

#3: All screw adjustments on Rome SDS UnderWrap bindings are made with a #3 Phillips screwdriver.


5 ConFormist Toe Strap Positioning

Rome ConFormist toe straps let riders locate their toe strap in multiple positions on their boots: anywhere from over-the-boot to over-the-toe. In the over-the-toe position, Rome ConFormist toe straps self-adjust to the toe profile of all boot brands and models in the market.

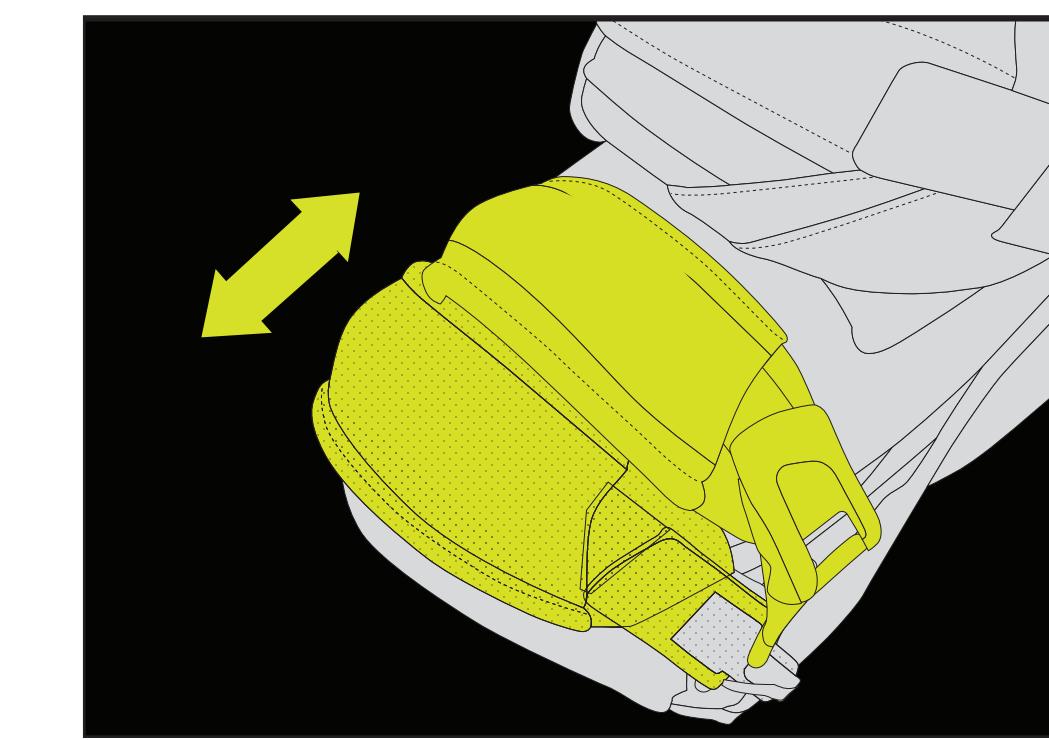

6 Zero-to-24 Forward Lean Adjustment

Having a zero-degree forward lean option is critical in a binding—many freestyle riders like their highbacks straight up and down for balance. A high range up to 24-degrees is critical as well—many other riders like immediate support for laying into heelside turns. Rome bindings deliver the best of both worlds and leave the choice up to you. Tool free.

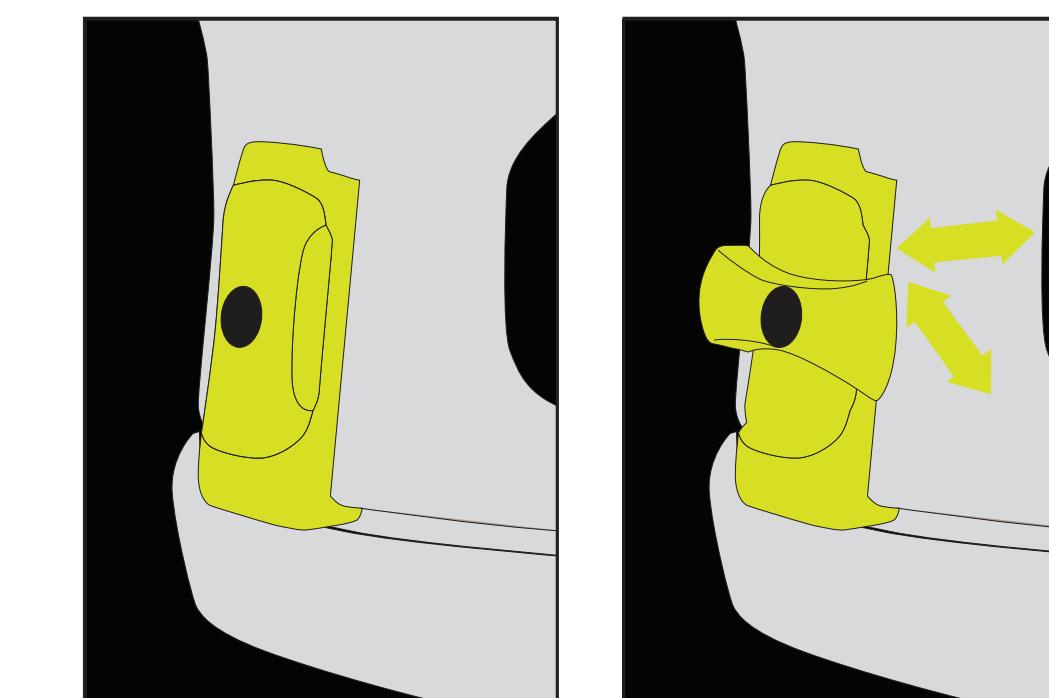

ROME SDS